




User manual

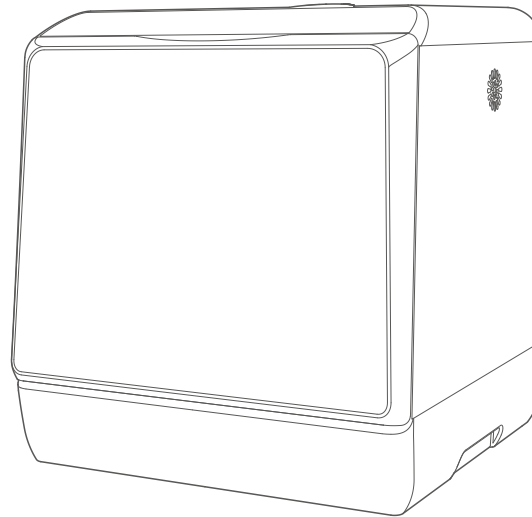

Read this user manual carefully. Contains important information about installing, setting up, using and maintaining the product. Please keep all documents for future use or for the next owner.

Content

IMPORTANT SAFETY INFORMATION	01
GROUNDING INSTRUCTIONS	02-05

> How to use

Product presentation	06
Control panel	07
Installation	08
Tableware loading	09
Usage	10-12
Functions	12-13

> Maintenance and repairs

Maintenance and cleaning method	14
Water softening process	15-16
Troubleshooting	17-20
Safety and warning	21
Specifications	22
User manual digital format download	23

IMPORTANT SAFETY INFORMATION

TO REMEMBER !

When using the dishwasher, follow the precautions listed below:

- ▶ This appliance is intended for use in household and other types of situations such as:
 - kitchen areas of store staff;
 - offices and other work environments;
 - farms, hotels, motels and other residential environments;
 - boarding-type environments;
 - caravans, caravan parks and in camping environments;
- ▶ This appliance can be used by children aged 8 and over and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe and understands the dangers involved. Children will not play with this device. Cleaning and user maintenance must not be carried out by children without supervision (per EN 60335-1).
- ▶ The packaging material can be dangerous for children.
- ▶ This appliance is for indoor household use only.
- ▶ Protect against the risk of electric shock, do not immerse the product, power cord and plug in water or other liquids.
- ▶ Unplug the product before cleaning or when performing maintenance and use only a soft cloth dampened with soap to clean it, before finishing the cleaning process with a dry cloth to wipe the product.

GROUNDING INSTRUCTIONS



- ▶ This appliance must be grounded. In the event of a fault, grounding will reduce the risk of electric shock by providing a path of least resistance for electrical current. This appliance is equipped with a grounding conductor plug.
- ▶ The plug must be connected to an appropriate electrical outlet that is installed and grounded in accordance with all local laws and regulations.
- ▶ Improper connection of the equipment grounding conductor may result in the risk of electric shock.
- ▶ Consult a qualified electrician or authorized service representative if in doubt that the appliance is properly grounded.
- ▶ Do not modify the plug supplied with the appliance if it does not fit into the outlet.
- ▶ Install a suitable electrical outlet with a qualified electrician.
- ▶ Do not abuse, sit or stand on the appliance door or dish rack.
- ▶ Do not operate the appliance unless all housing panels are correctly fitted.
- ▶ Open the door very carefully if the appliance is running, as there is a risk of water splashing out.
- ▶ Do not place heavy objects or stand on the appliance door when it is open. The device may tip over.
- ▶ When loading dishes to be washed you should:
 - locate the sharp objects so that they do not damage the door seal;
 - we note that knives and other utensils with sharp points must be loaded in the basket with the points down or placed in a horizontal position.

- ▶ Check that the detergent powder is no longer present inside the machine after the wash cycle is complete.
- ▶ Do not wash plastic products unless they are marked "dishwasher safe".
- ▶ For plastic products that are not marked, check the manufacturer's recommendations.
- ▶ Use only recommended detergent and rinse agents as if you were using an automatic dishwasher.

- ▶ Never use soap, laundry detergent or hand wash in this appliance.
- ▶ The door should not be left open as this could increase the risk of tripping.
- ▶ If the power cord is damaged, it must be replaced at a service center or by a qualified person to avoid a hazard.
- ▶ During installation, the power supply must not be excessively or dangerously bent or flattened.
- ▶ Do not change the controls.
- ▶ The appliance must be connected to the main water valve using new sets of hoses. Old hose sets must not be reused.
- ▶ The maximum number of sets of plates that can be washed in the machine is 2.
- ▶ The maximum allowable inlet water pressure is 1MPa.
- ▶ The minimum allowable inlet water pressure is 0.04MPa.

DISPOSAL



- ▶ The packaging materials of this device are recyclable. Dispose of the packaging in an appropriate waste collection container for proper recycling.
- ▶ It is forbidden to dispose of this device as household waste. Correct recycling of this product is achieved by observing the disposal symbol on the packaging indicating that this product cannot be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment.

By ensuring that this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health that could otherwise be caused by improper waste handling of this product.




For more detailed information on recycling this product, we recommend that you contact your local household waste disposal council or the store where you purchased the product.

TO REMEMBER !


- ▶ To dispose of the package and the device, please go to a recycling center. Therefore, cut off the power cord and render the door closer inoperable.
- ▶ Cardboard packaging is made from recycled paper and should be disposed of in the waste paper collection for recycling.

- ▶ By ensuring that this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health that could otherwise be caused by improper waste handling of this appliance.
- ▶ For more detailed information on recycling this appliance, please contact your local council and household waste disposal service centre.
- ▶ Do not dispose of this appliance as unsorted municipal waste. Separate collection of this waste for special treatment is required.


Product presentation

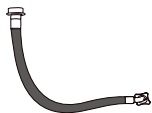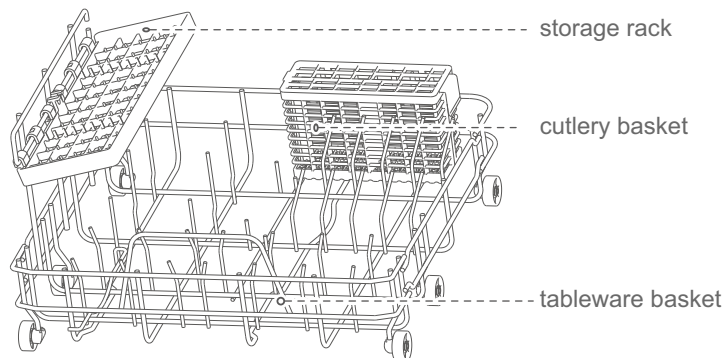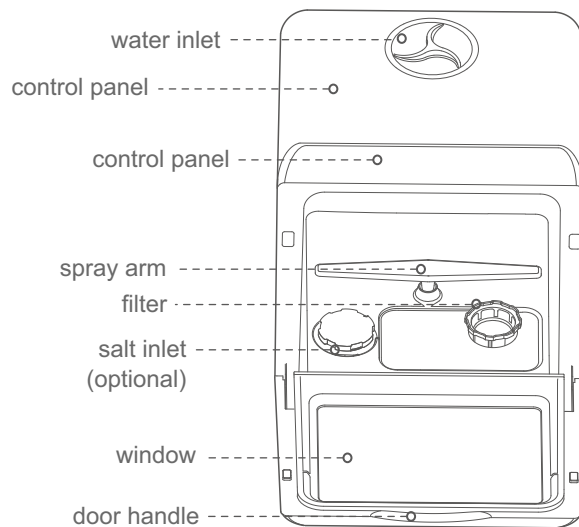

water supplying
hose

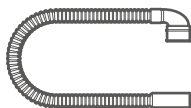

drainage hose

 

fruit basket




cup



hose collar

Control Panel

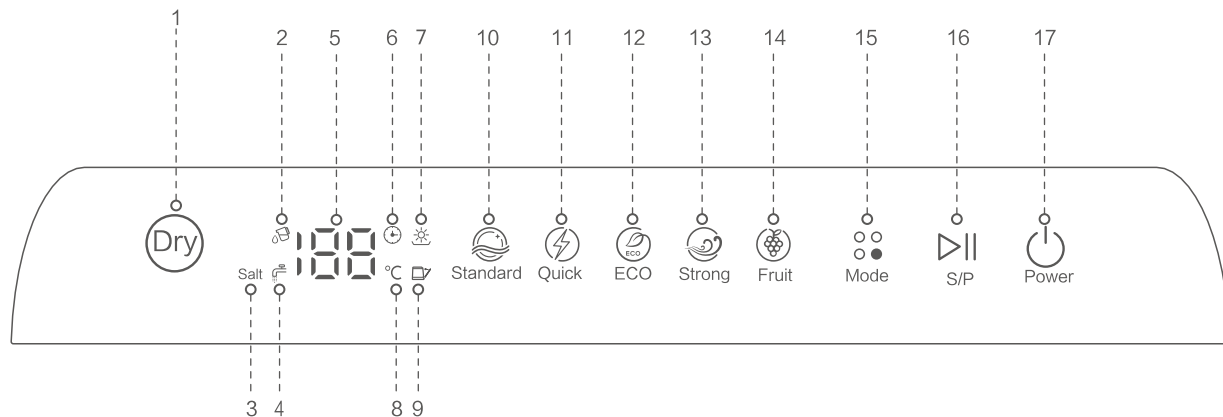

01. Dry

02. Water manual supply

03. Salt level indicator

04. Tap water supply

05. Display

06. Time

07. Timer

08. Temperature

09. Door open

10. Standard program

11. Quick program

12. ECO program

13. Strong program

14. Fruit program

15. Program selection

16. START / STOP

17. ON / OFF (appliance)

Installation

1. Supply hose installation

1 Connecting to the appliance


connect the elbow of the supply hose to the water supply port on the back of the product and then tighten the threaded head

2 Connecting to the water tap supply


there are three options (A, B, C) for connecting to the water tap, but for options B and C, a hole must be drilled on or under the counter to connect the hose

TO REMEMBER

supply hose elbow diameter is 3/4" internal thread, valve diameter must be 3/4" external thread

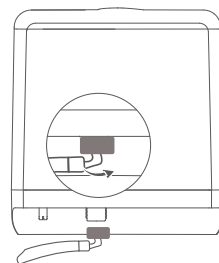

appliance side

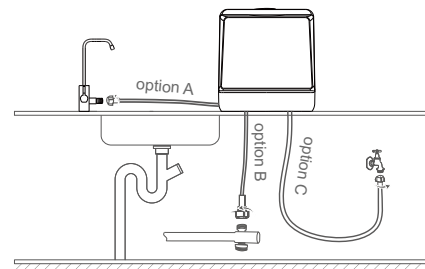

water tap supply side


2. Drainage hose installation

1 Connecting to the appliance


connect the elbow of the drain hose to the water outlet on the back of the product and then tighten the collar

2 Connecting to the drainage

there are three options (A, B, C) for drain connection. For options B and C a hole must be drilled on or under the counter to connect the hose

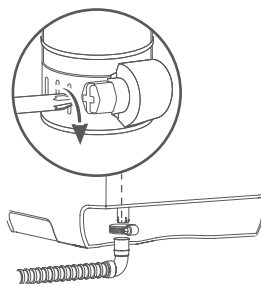

appliance side

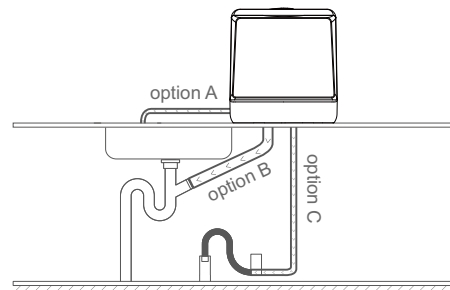

drainage side

Tableware loading

- 1 Remove large food residues from the dishes to avoid blocking the drain hose.



- 2 Take the image on the right as your reference for good tableware organization





Tableware	Quantity
190mm Dessert plate	3
130mm Dessert bowl	1
70mm Mug	1
60mm Glass	2
Fork	2
Knife	2
Soup spoon	2
Dessert spoon	2
Tea spoon	2
230mm Soup plate	1
140mm Saucer	1
78mm Cup	1
213mm Melamine bowl	1
Serving Fork	1
195mm Melamine dessert plate	1

TO REMEMBER

to clean the crockery completely, tilt the crockery inwards or place it face down.

ECO Program

For the ECO wash program, add 16g of detergent, then start the program. When there are 18 minutes left in the program, press pause, open the door and add 2ml of rinse aid, then close the door again and continue the program until its end.

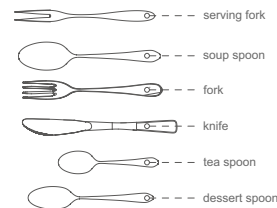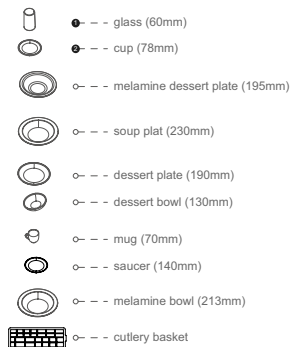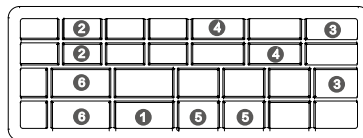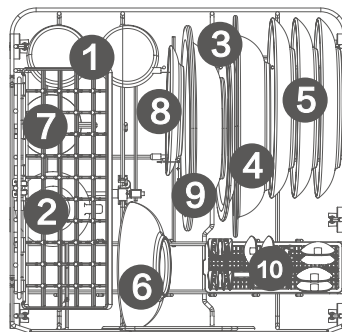


Usage

1 Appliance start

Connect the appliance, touch the " ⏻ " button to turn it on.

WARNING

Before the program ends, touch the " ⏻ " button for about 3 seconds to force the appliance to stop.

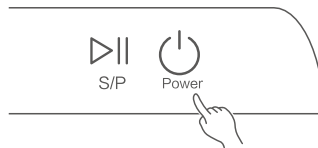


2 Detergent adding

Open the door, add a moderate amount of detergent powder or a detergent capsule to the appliance and close the door.

WARNING

- do not use detergent when using the fruit washing program;
- the dose of detergent for each washing cycle is between 8-10g.

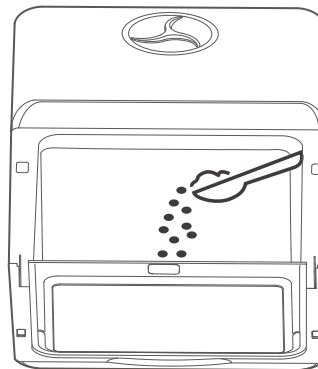

3 Program selection

Press " ⏺ ", to select each program, the indicator will light one by one, select the desired program.




Usage

4 Program operation

Press "▷|| S/P", and run the selected program, the appliance will automatically check the water supply.

WARNING

1. After checking the water tap or water tank before running the program, and if the "💧", "🔥", "💧" indicators will turn red, you will need to open the water tap or fill the tank.
2. The appliance will check the water supply 5 times, and after that if the water supply is still insufficient, the appliance will enter stand-by mode.
3. Press "▷|| S/P" to force pause the appliance, to add dishes during a wash cycle;
4. Press "🔌" for about 3 seconds to exit the program, and the appliance will drain the water and stop;
5. Press "Dry" to start a 73-hour air circulation cycle to keep the air inside the unit fresh

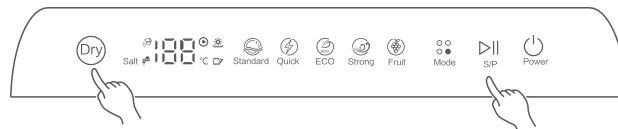


5 Washing


The machine has two ways of supplying water: **tap supply** and **tank supply**.

WARNING

1. The "💧" indicator is white, which means the appliance is working when the water tank is supplied.
2. The "💧" indicator is white, which means the appliance is working on tap supply.

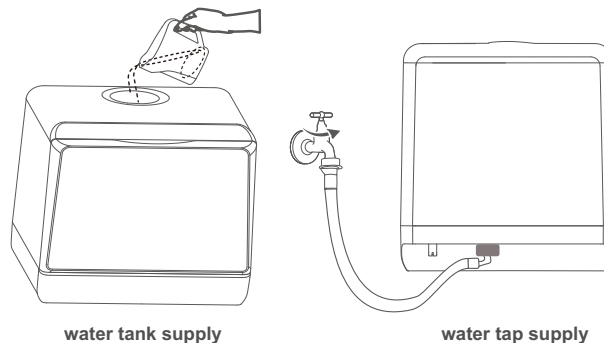

Usage

3. If the water tank is full, the appliance will automatically switch from tap feed to water tank feed.
4. After you put 3 cups of water into the appliance's water tank, the appliance will make a "Di, Di, Di" sound, which means the water tank is full, and "  " will turn white.
5. If you are using the appliance with tap water supply, you will need to keep the tap water supply open at all times.

Functions

Program	Program description	Time	Detergent amount	Temperature	Drying time	Storage (if it selected)
STANDARD	hot water washing cold water rinsing cold water rinsing hot water rinsing	69 min	8g	wash at 55°C rinse at 68°C	60 min	circulating fresh air for 73 hours
QUICK	hot water washing cold water rinsing hot water rinsing	29 min	8g	wash at 50°C rinse at 62°C	60 min	circulating fresh air for 73 hours

Functions


Program	Program description	Time	Detergent amount	Temperature	Drying time	Storage (if it selected)
STRONG	hot water washing hot water rinsing cold water rinsing hot water rinsing	89 min	12g	wash at 55°C rinse at 55°C rinse at 75°C	60 min	circulating fresh air for 73 hours
ECO	hot water washing cold water rinsing hot water rinsing	59 min	8g	wash at 55°C rinse at 68°C	60 min	circulating fresh air for 73 hours
FRUITS	cold water rinsing cold water rinsing	19 min	/	/	/	/
DRY	/	/	/	/	60 min	circulating fresh air for 73 hours

Maintenance and cleaning method

Filter cleaning

1 Disassembly

rotate counter-clockwise to disassemble the filter assembly (filter mesh, main filter and fine filter)

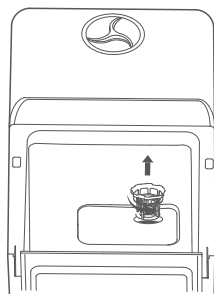


2 Cleaning

use water to wash and brush each of the filter parts



3 Assembly


after cleaning, rotate clockwise to mount and lock the filter assembly (filter mesh, main filter and fine filter)

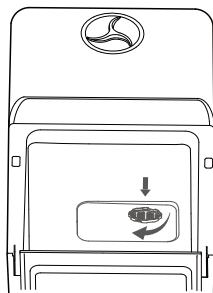

Spray arm cleaning


1 Disassembly

open the door, remove the basket, pull the spray arm up and down to remove it

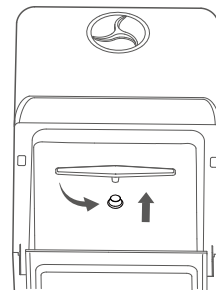


2 Cleaning

use water to wash and brush to wash each part of the spray arm and use sharp tools like needle to clean all the holes if necessary

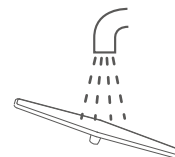

3 Assembly


after cleaning, please press each part of the spray arm into place and make sure the arm moves smoothly

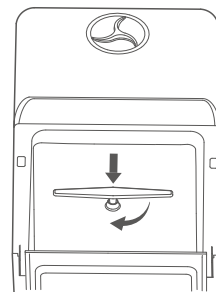

Water softening process

Adding special salt

- 1 Open the appliance door, rotate counter-clockwise to open the salt supply container.

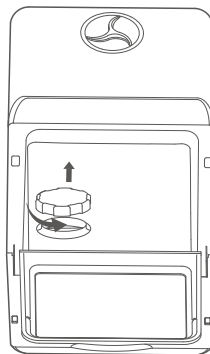


- 2 Carefully fill the appliance's supply container with the special salt.

WARNING

Use only salt that is used specifically for dishwashers and not substitutes.


The volume of the special salt container does not exceed 500g. This volume being sufficient for a use between 1-6 months depending on your settings.

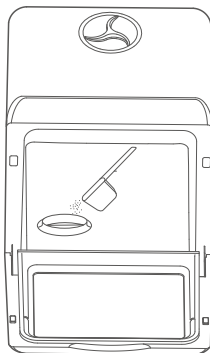

- 3 Add water until the special salt container is completely filled and use a tool to mix them.

WARNING


Do not add warm water or hot water. Only fill with cold water.

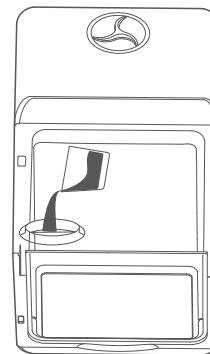

- 4 Turn clockwise to close the special salt container when finished

WARNING

Make sure you tighten the lid of the container tightly.

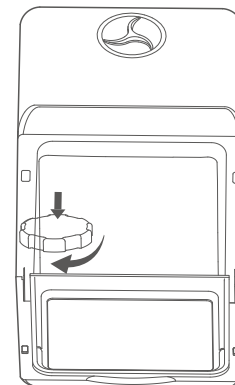

Water softening process

Setting

Setting range depending on water hardness



H1 - H7


set according to water hardness. The following table is used as a reference for water hardness:

Water hardness value		Hardness range	Setting value
Ppm (mg/L (CaCO ₃))	mmol/L		
/	/	/	H1
0-100	0-1.00	soft	H2
101-200	1.01-2.00	medium	H3
201-300	2.01-3.00	medium	H4
301-450	3.01-4.50	hard	H5
451-650	4.51-6.50	hard	H6
>651	>6.51	hard	H7


 
Setting steps



1 Start setup process

Turn on the appliance, touch and hold the "  " and "  " buttons at the same time for about 5 sec to enter the level selection menu.

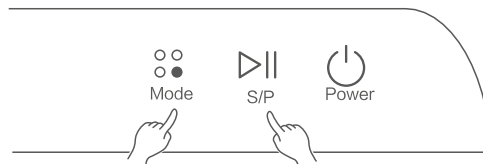

2 Setting the hardness level

The initial setting is H4, touch the "  " button to choose the desired level (H4, H5, H6, etc.), then touch the "  " button to confirm the choice.

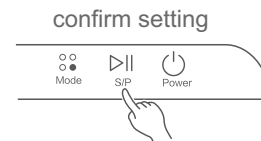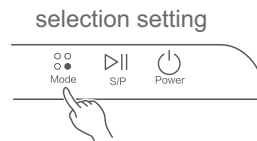

Troubleshooting

1. Error codes

CODE	Error description	Solution
E2	Drainage	<ol style="list-style-type: none">1. Check the drain (drain) pipe and make sure the pipe is straight and not bent;2. Turn the appliance OFF and check if anything is stuck filling or drain pipe;3. Make sure all pipes are not blocked by anything.
E3	Overflow	Tilt the appliance to 30 - 45 degrees, let the water drain from the base of the appliance, then restart the appliance, and if it still has this fault, contact the iHunt service center
E4	Temperature	Restart the appliance, and if it still has this fault, contact the iHunt service center
E5	Supplying	
E6	Heating	
E7	Pressure	

Troubleshooting

2. Problems

Problem	Reason	Solution
tableware is not clean	tableware incorrect loading	make sure the tableware has enough space
	the spray arm is stuck	make sure nothing is jamming the spray arm
	the spray arm is blocked	clean the spray arm
	the filter is blocked	clean the filter
	incorrect filter installation	install correctly the filter
	incorrect program selection	select the proper washing program
	no detergent	add detergent (capsule / powder / liquid)
the appliance is not starting	no water / water shortage	add water till the light LED indicator turns off
	the door is not fully closed	check if and object is blocking the door to close properly and fully
can't select the program	the appliance is already running on another program	re-select the program after stopping the curent one, or wait untill the current program finishes

Troubleshooting

Problem	Reason	Solution
tableware is wet	improper program selected	select the appropriate program
	poor drying effect for plastic tableware	you have to manually wipe them to dry
	incorrect tableware loading	load the tableware correctly
	the Dry program has not finished yet	wait for the drying program to finish
	wooden tableware	you have to manually wipe them to dry
plastic tableware discoloring	the washing temperature is too high	select the program with a lower temperature
"salt" LED is turn on	no salt / salt shortage	add special salt
	salt hasn't completely dissolved	this is normal, wait for the salt to dissolve
Detergent left	spray arm is blocked, the water with detergent was not drain	make sure the spray arm moves smoothly
	bad quality detergent	use a suitable detergent for washing

Troubleshooting

Problem	Reason	Solution
amount of foam present in the appliance	using an inappropriate detergent	<ol style="list-style-type: none">1. use a suitable detergent for washing;2. open the appliance and wipe the foam by hand;3. fill the appliance with 2-3L of water, select any program, after 1-2 min, the foam will drain, repeat the process if necessary.
abnormal sound inside the appliance	the spray arm hits the tableware	place the tableware correctly in the appliance
	the tableware moves slightly	make sure the tableware is fixed before starting the washing program
egg custard left on the tableware	protein solidification	clean the tableware that has egg cream by hand
water drops left inside the appliance	drying time is not enough	select the "Dry" program

Safety & Warning

TO REMEMBER

1. The power outlet must be grounded to avoid possible electric shock or leakage.
 2. Do not share the outlet with other appliances to avoid starting a fire.
 3. Any new parts or wiring will need to be changed by an authorized person after the problems are resolved.
 4. Dispose of the device in an environmentally friendly manner according to local regulations.
 5. Do not place the device in any type of environment below 0°C, such as outside the home in cold weather.
 6. Use salt and detergent specifically for a dishwasher.
 7. Do not drink the water left in the appliance or throw water inside the appliance to avoid electric shock.
 8. Do not place heavy objects on the door when the door is open to avoid the appliance falling.
 9. Do not place and use the appliance at a distance of less than 150mm from any gas stoves and heaters.
 10. Do not let children use the device independently to avoid any accidents.
 11. Do not place or use the device on an unstable, wet, smooth platform to avoid any damage.
-

Precautions


1. Do not open the door when the appliance is running to avoid hot water flying out and causing injury.
2. Do not touch or block the side air outlet.
3. Do not tilt or move the appliance when it is operating.
4. Do not position the knife or other sharp objects towards you to avoid injury when opening the door.
5. Stop the use of the appliance, the power supply and close the water supply valve when the appliance has a fault.
6. Check and clean the appliance from time to time to get the best washing effect.
7. Fix the drain hose in such a way that water does not remain in the drain hose.
8. Do not forcefully pull the power cord, drain hose or press the cutlery basket to avoid damage.
9. Do not use wet hands to operate the device to avoid electric shock.
10. Children should be away from chemical materials such as salt, detergent to avoid any accidents.

Specifications

Product

Voltage	220 - 240V
Frequency	50Hz
Power	950W
Inlet pressure	0.04 ~ 1.00 MPa
Water supplying	tank & water tap
Supported tableware sets to wash	2 tableware sets
Water consumption	5L
Net weight	13 Kg
Drying method	hot air
Dimensions (L x l x H)	428*425*458mm
Box dimensions (L x l x H)	530*525*560mm

Wiring diagram

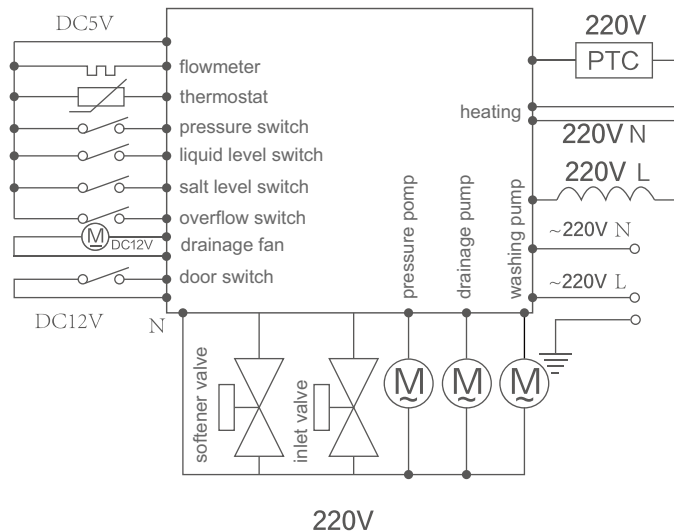

User manual download

The user manual for this product will have a printable format (physical in the product box) for English and Romanian languages only. For the other 4 languages, **Bulgarian (BG)**, **Hungarian (HU)**, **Polish (PL)** and **Ukrainian (UA)**, the user manual will only be available in digital format which you can access using the following two methods:

Method no.1

You can use the following link and then choose the language you want:

<https://www.ihunt.ro/manual>

BG

HU

PL

UA

Method no.2

Use your device's camera and scan the QR code displayed on this user manual page

